


## SR9900 MAC OS INSTALL GUIDE

### SIP Disable

1. Press “command” and ‘R” key, then power up the computer, wait the system enter into recovery mode.

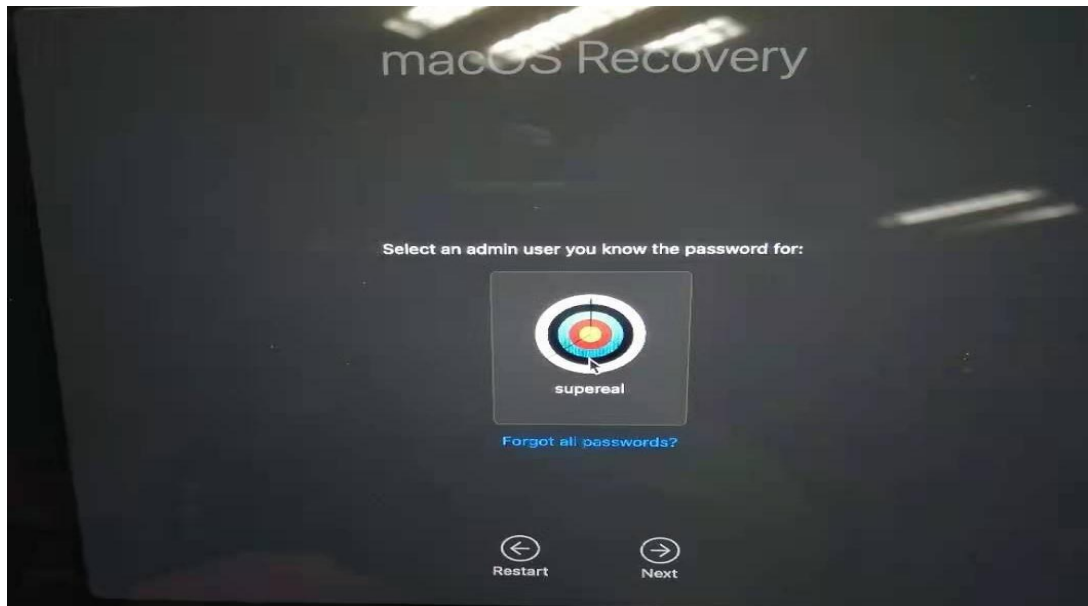


2. Select the user and then click the “next” button. Enter the password, click “continue” button.




## CoreChips

3. Chose the Utilities ->terminal in the menu.

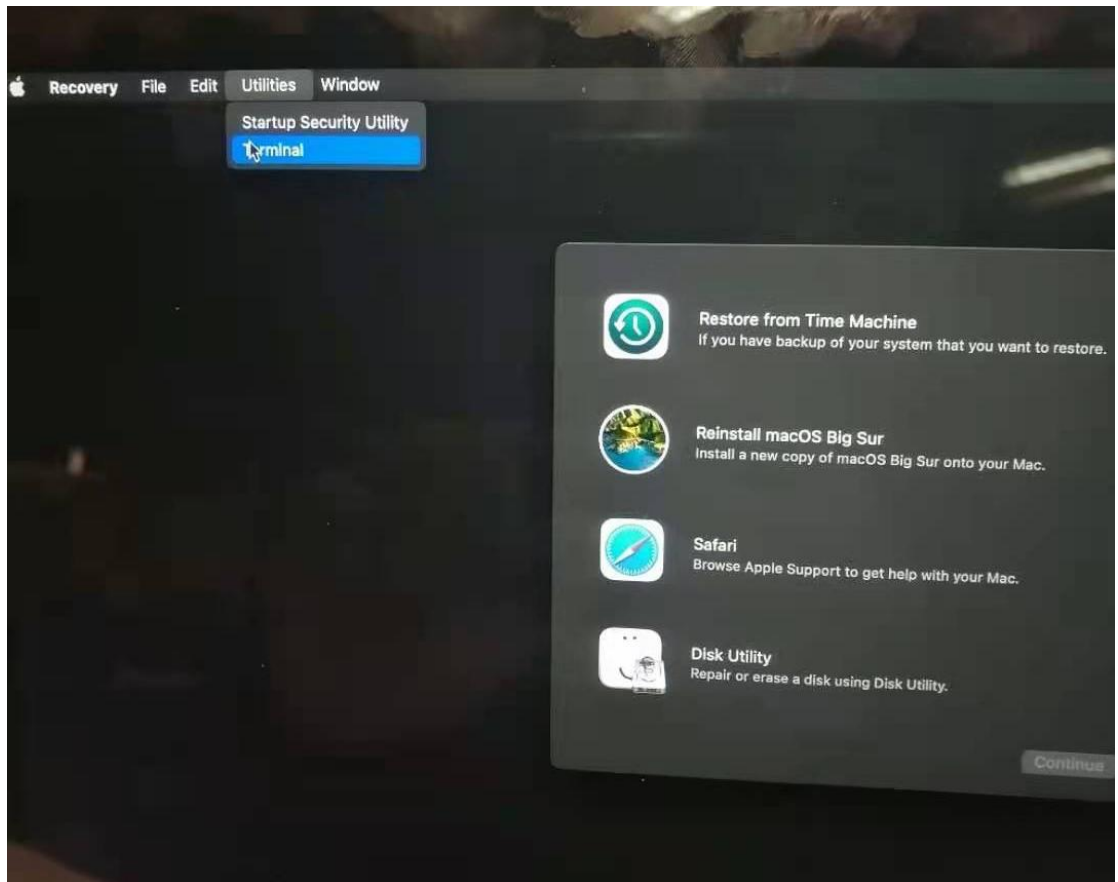


4. In the terminal, enter the following command: `csrutil disable`, then restart the computer.

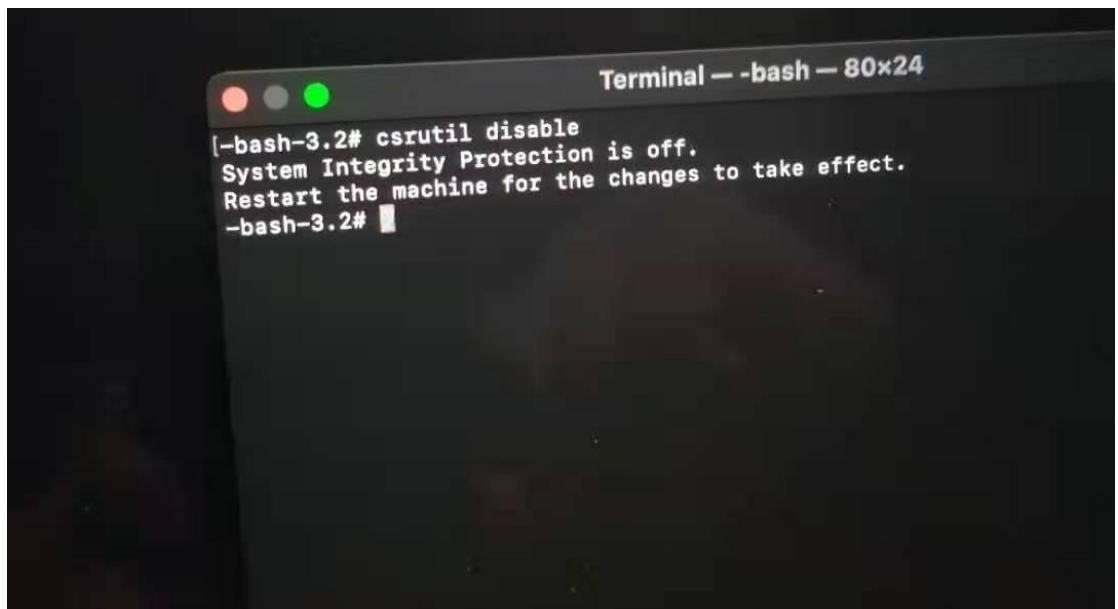


## Install the SR9900 pkg file.

1. Click the SR9900 pkg file, then click "install" button.

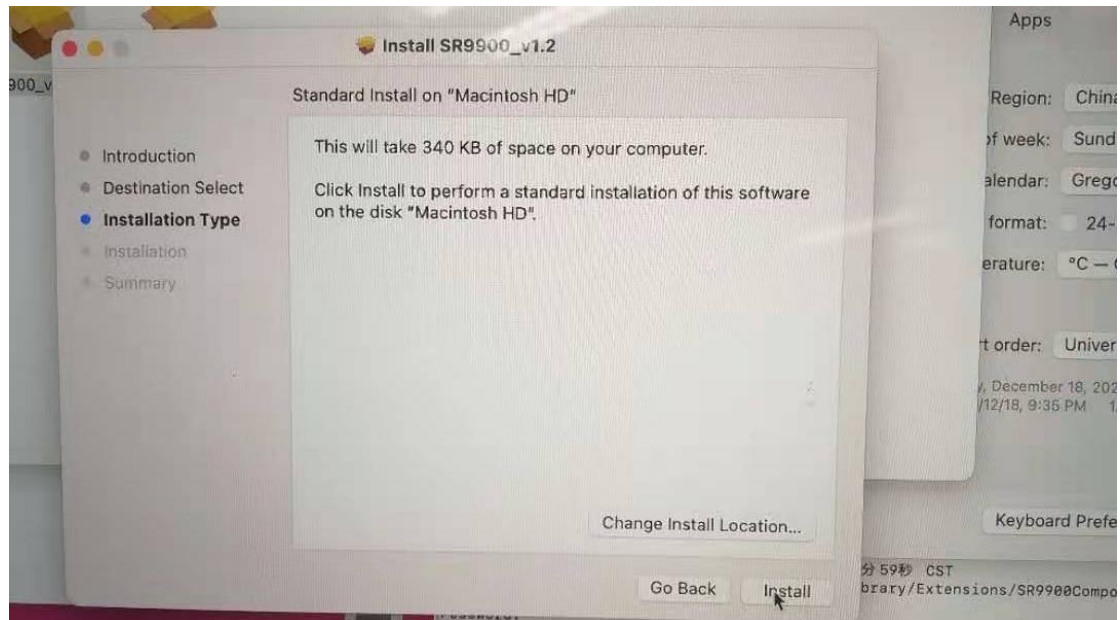


2. Click the "continue" button

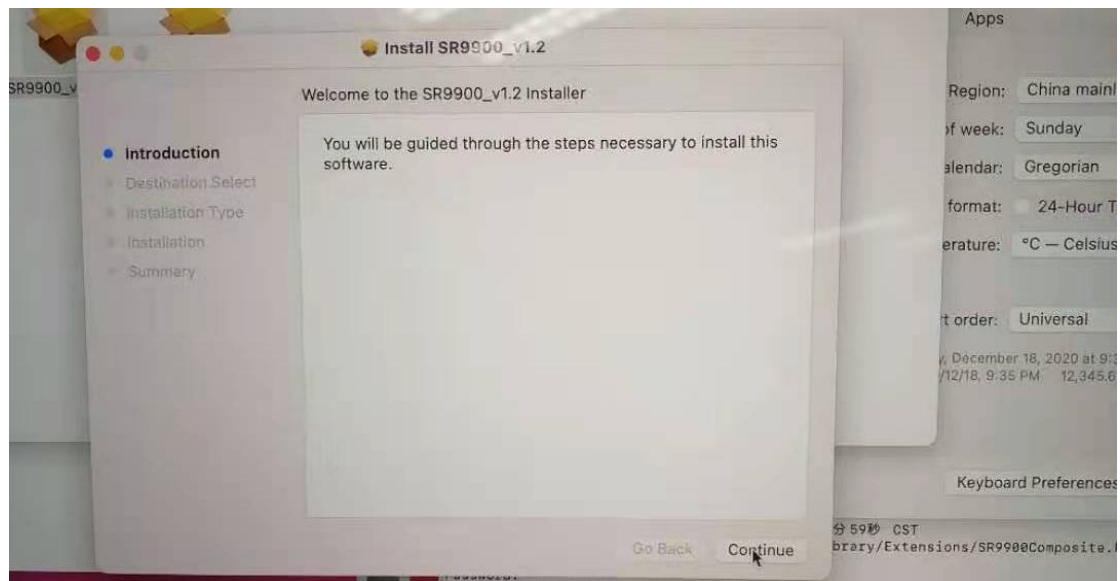


3. Enter the password, then click "install software" button.

## CoreChips

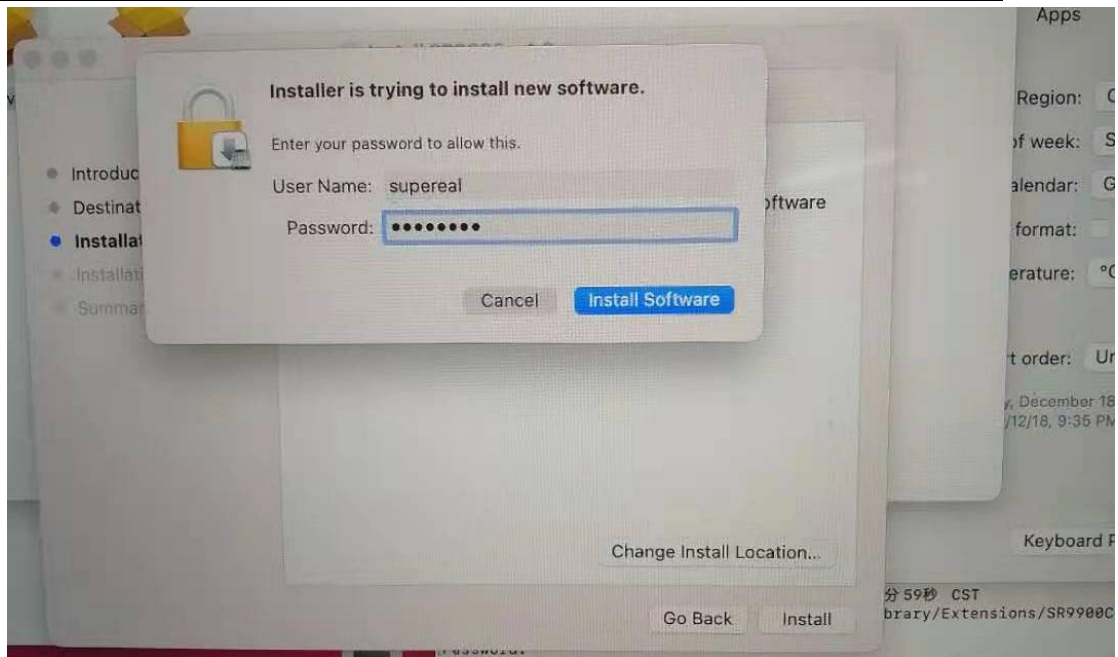


4. Click "open Security Preferences" button.

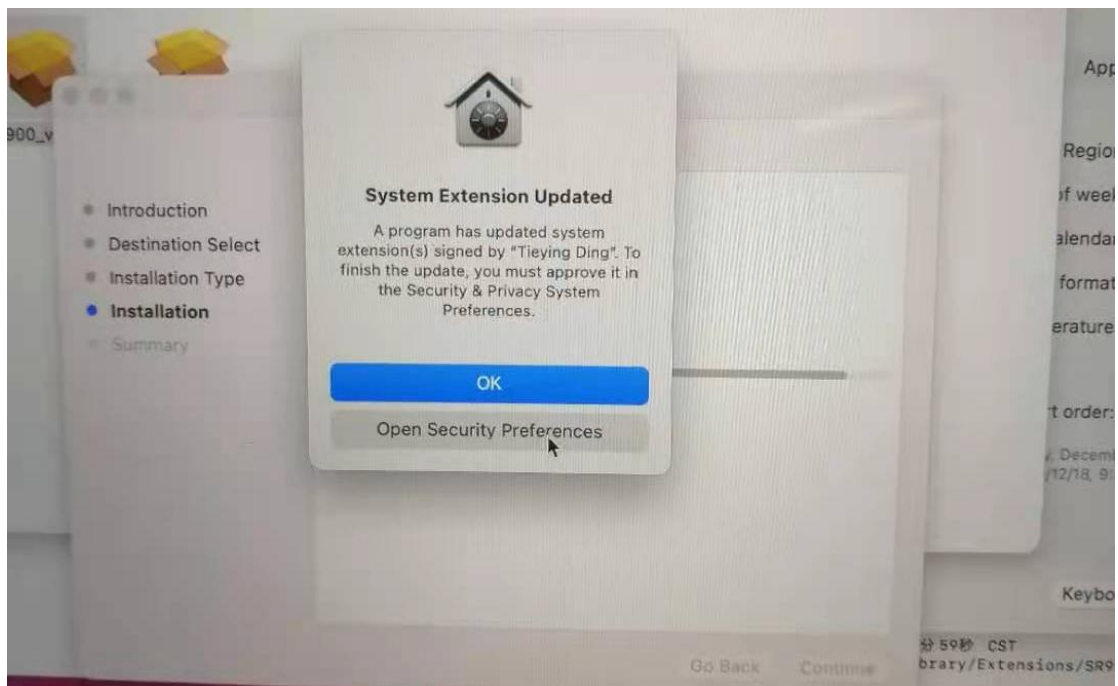


5. Click "Click the lock to make changes" icon.

## CoreChips

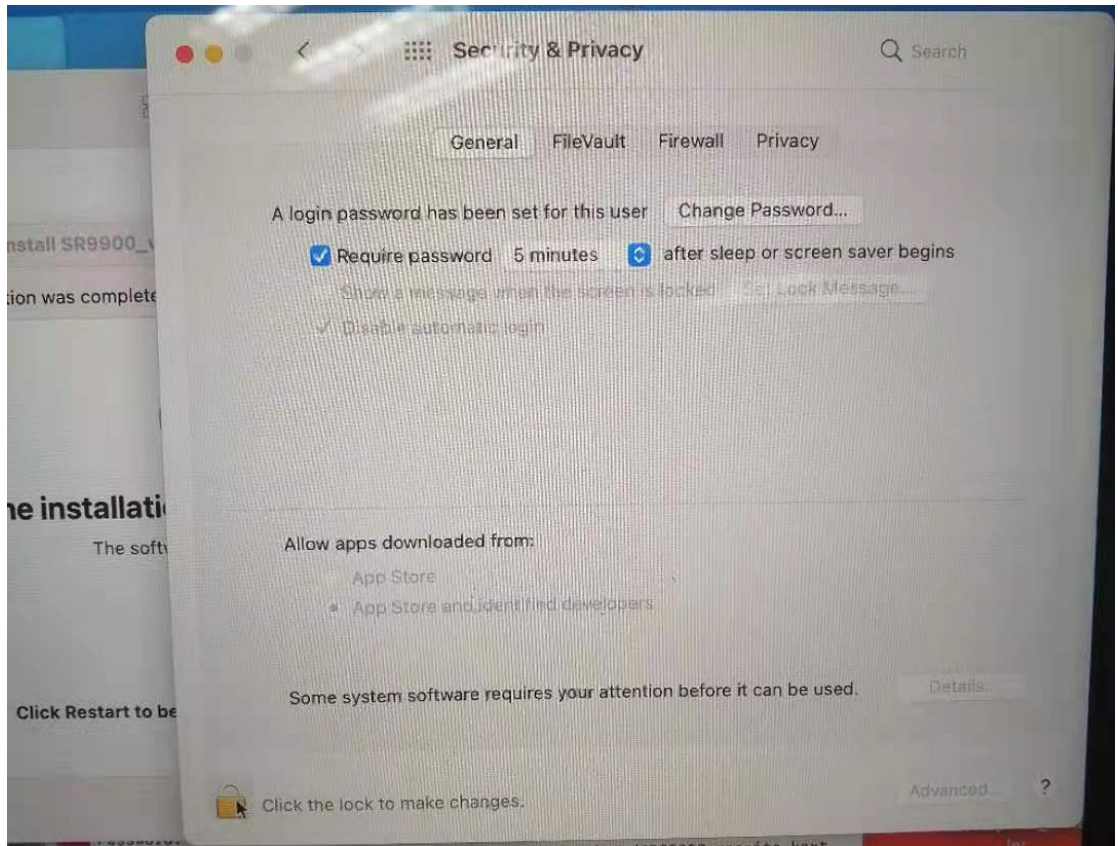


6. Enter password, then click "Unlock" button.

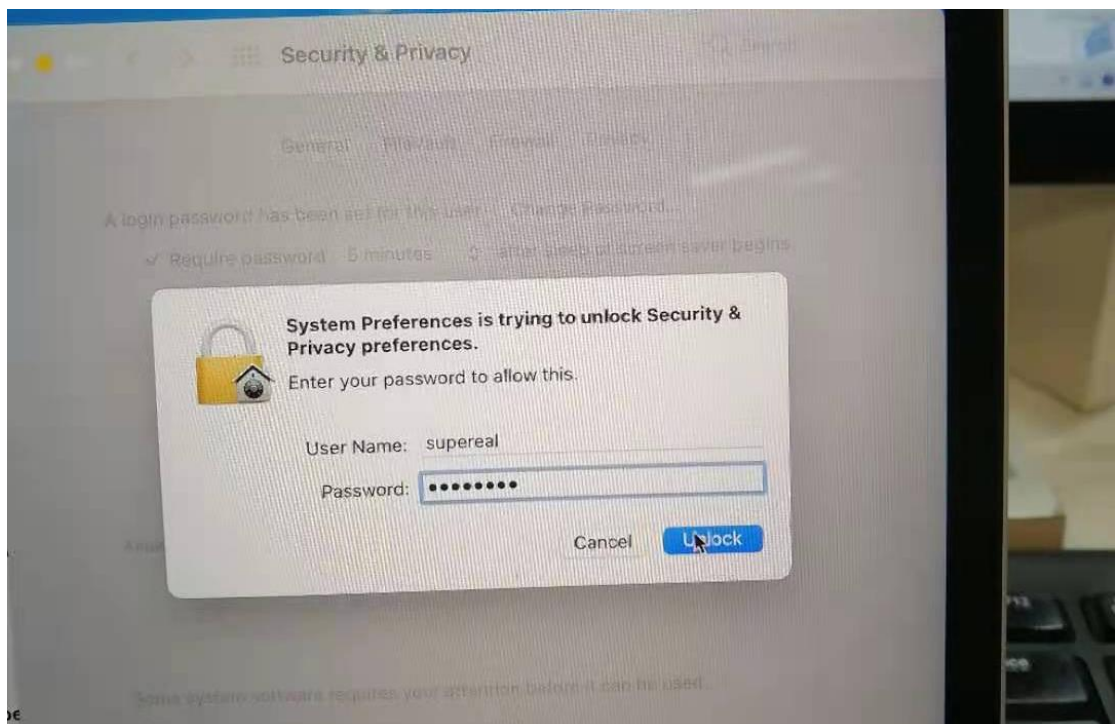


7. Click the "Details" button.



## CoreChips

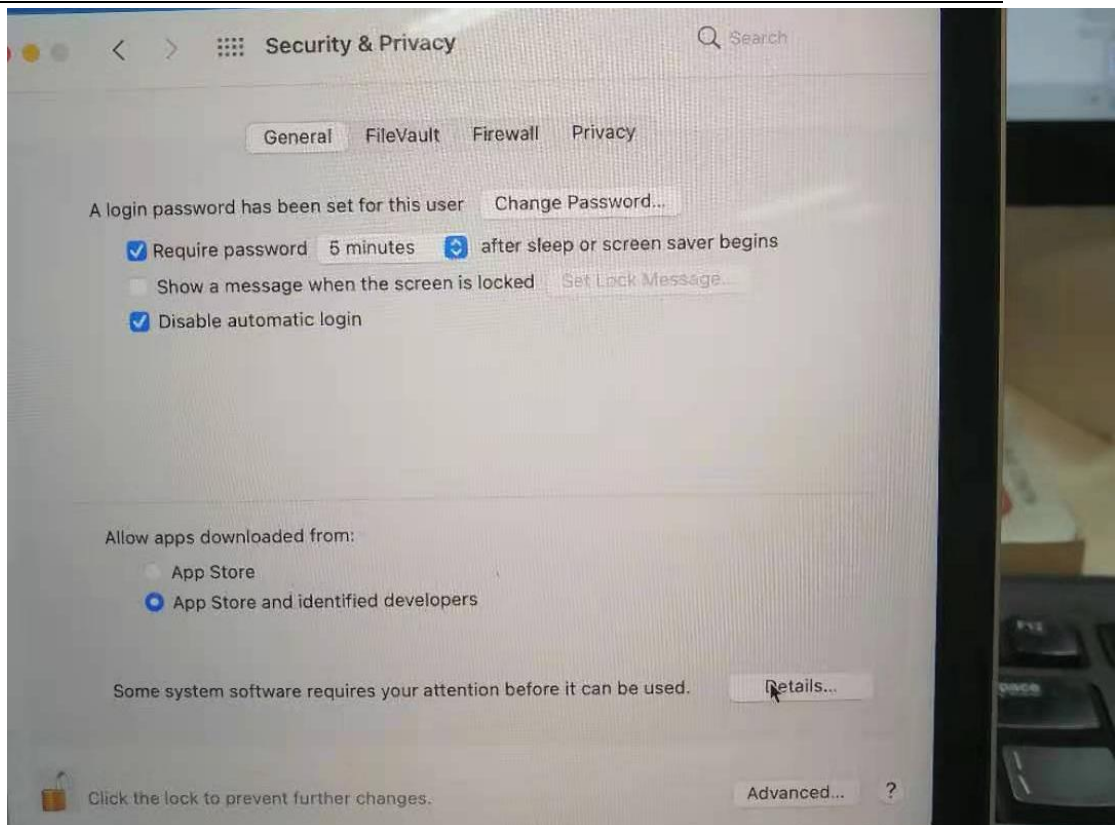


8. Click the "OK" button.

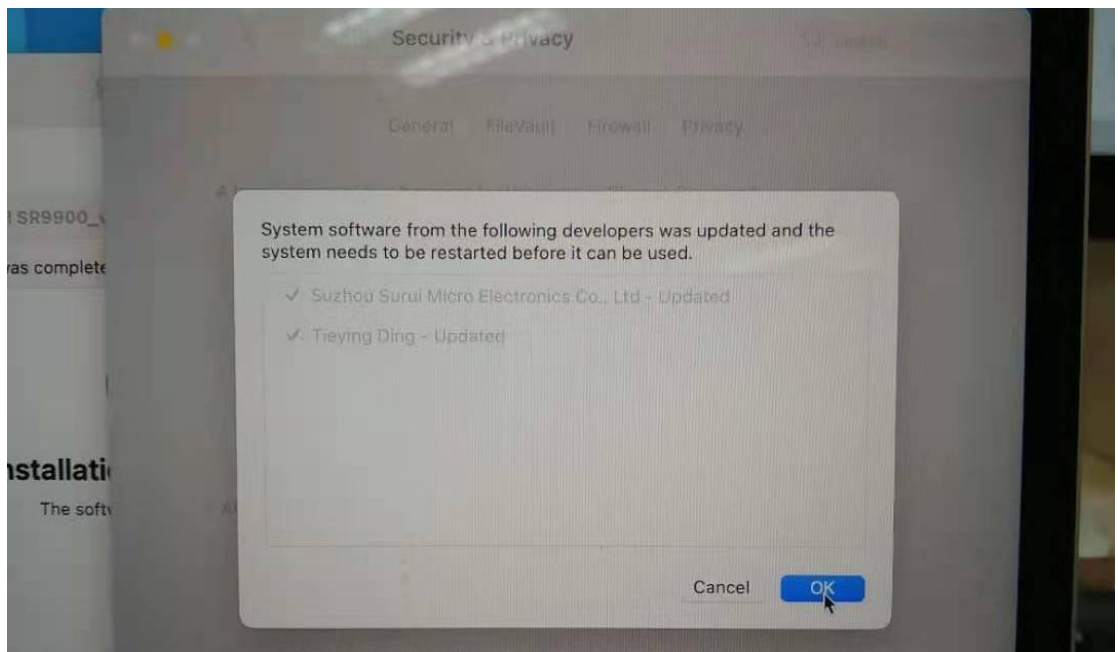

9. Click the "Not Now" button. And go back to the SR9900 pkg application.

## CoreChips

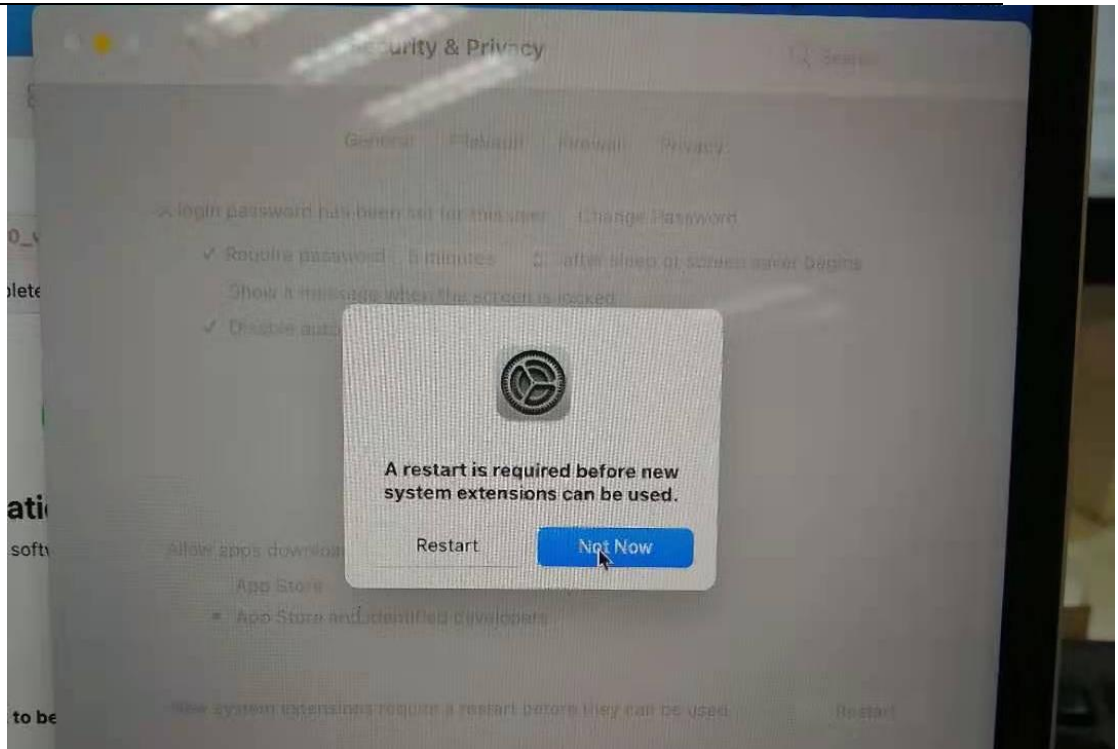

10. Click the "Restart" button, Now the driver installation is finished.

